


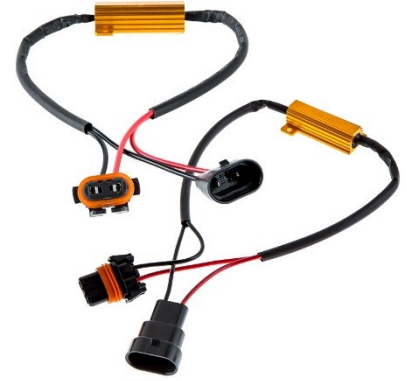


Warning canceller resistors Installation guide
Part # WC9005 for 9005, 9006 & 9012
Part # WCH11 for H11



This product is used only when the 'ADD-A-CIRCUIT' Relay is needed

1. Plug the resistor on the OEM side bulb connector on each sides of the vehicle.
- 2.

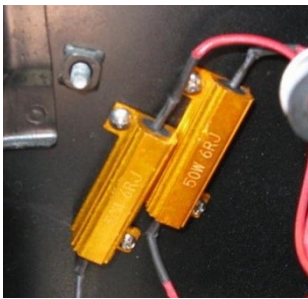

3. Screw both resistors on a clean grinded metal surface for heat dissipation. (When unscrewed, resistor temperature can rise up to 100 degrees celcius.)

4. Once the surface location is found, unscrew resistors and apply dielectrical grease between resistor and surface.



5. Screw the resistors back in place.

6. Plug the resistor on the LED bulb connector on each sides of the vehicle.

